

The right solution for you



EXPANDABLE



FULL MODULAR



FULL MODULAR



FULL MODULAR



FULL MODULAR

COMpact 4000

sugg. 4 trunk lines		basic setup		sugg. 12 subscribers	
max. 4 VoIP channels	4 VoIP channels in the system	max. 4 VoIP channels		max. 2 ISDN ports (S ₀ /U _{PO})	
max. 2 ISDN ports (S ₀)	2 ISDN ports in the system	max. 2 ISDN ports (S ₀ /U _{PO})		8 analogue ports	
	8 analogue ports in the system	8 analogue ports			

max. 10 trunk lines		full setup		sugg. 16 subscribers	
max. 10 VoIP channels	max. 12 VoIP channels	max. 12 VoIP channels		max. 6 ISDN ports (S ₀ /U _{PO})	
max. 3 ISDN ports (S ₀)	max. 6 ISDN ports	max. 6 ISDN ports (S ₀ /U _{PO})		8 analogue ports	
	8 analogue ports	8 analogue ports			
max. 4 analogue trunks	max. 4 analogue trunks	8 analogue ports			

Door ports (max. 8) are generated out of internal analogue ports and VoIP channels.

COMpact 5200/5200R

max. 4 trunk lines		basic setup		sugg. 6 subscribers	
max. 4 VoIP channels	4 VoIP channels in the system	max. 4 VoIP channels			

max. 14 trunk lines		full setup		sugg. 50 subscribers	
max. 14 VoIP channels	max. 32 VoIP channels	max. 32 VoIP channels		max. 10 ISDN ports (S ₀ /U _{PO})	
max. 3 ISDN ports (S ₀)	max. 10 ISDN ports	max. 10 ISDN ports (S ₀ /U _{PO})		max. 20 analogue ports	
	max. 20 analogue ports	max. 20 analogue ports			
max. 6 analogue trunks	max. 6 analogue trunks				

Door ports (max. 8) are generated out of internal analogue ports and VoIP channels.

COMpact 5500R

max. 8 trunk lines		basic setup		sugg. 12 subscribers	
max. 8 VoIP channels	8 VoIP channels in the system	max. 8 VoIP channels			

max. 20 trunk lines		full setup		max. 112 subscribers	
max. 20 VoIP channels	max. 80 VoIP channels	max. 80 VoIP channels		max. 10 ISDN ports (S ₀ /U _{PO})	
max. 3 ISDN ports (S ₀)	max. 10 ISDN ports	max. 10 ISDN ports (S ₀ /U _{PO})		max. 20 analogue ports	
	max. 20 analogue ports	max. 20 analogue ports			
max. 6 analogue trunks	max. 6 analogue trunks				

Door ports (max. 8) are generated out of internal analogue ports and VoIP channels.

COMmander® 6000R

max. 38 trunk lines		full setup		max. 112 subscribers	
max. 1 PRI port	max. 1 PRI	max. 64 VoIP channels		max. 32 S ₀ ports	
max. 38 VoIP channels	max. 64 VoIP channels	max. 32 U _{PO} ports		max. 32 analogue ports	
max. 16 S ₀ ports	max. 32 S ₀ ports	max. 32 analogue ports		max. 8 door ports (analogue/VoIP/FTZ)	
	max. 32 U _{PO} ports	max. 32 analogue ports			
	max. 64 analogue ports	max. 8 door ports (FTZ)			

Basic setup: 2 VoIP channels, an operation of the system without modules is not possible.

Door ports (max. 8) can be generated out of internal analogue ports and VoIP channels as well.

COMmander® 6000RX

max. 38 trunk lines		full setup		max. 112 subscribers	
max. 1 PRI port	max. 1 PRI	max. 64 VoIP channels		max. 56 S ₀ ports	
max. 38 VoIP channels	max. 64 VoIP channels	max. 72 U _{PO} ports		max. 64 analogue ports	
max. 16 S ₀ ports	max. 72 S ₀ ports	max. 64 analogue ports		max. 8 door ports (analogue/VoIP/FTZ)	
	max. 72 U _{PO} ports	max. 64 analogue ports			
	max. 64 analogue ports	max. 8 door ports (FTZ)			

Basic setup: 2 VoIP channels, an operation of the system without modules is not possible.

Door ports (max. 8) can be generated out of internal analogue ports and VoIP channels as well.

In this table you will find the connection and setup possibilities for all Auerswald ICT systems – from a compact expandable PBX system up to a full-modular communication server for medium-sized enterprises.

Please note:

- In the centre column you will find the system resources respectively the connection possibilities: in the basic setup without expansions or extra releases and in the full setup with the maximum possibilities per connection type. Due to the limited number of module slots it is not possible to reach all maximum values at the same time.

- The possibilities of the full-modular systems are solely defined by the setup with expansion modules and where appropriate additional software options. In the scope of supply up to 8 VoIP channels are included.

- The indication „max.“ (maximum) refers to a limit which cannot be exceeded.
- The indication „sugg.“ (suggested) specifies which maximum setup level is reasonable, but more might be possible.

- At the combination of external VoIP channels in conjunction with additional ISDN and/or analogue ports the maximum number of possible trunk lines must be taken into account (COMpact 4000/5200/ 5200R/5500R, COMmander 6000/6000R/ 6000RX).

- At the combination of internal VoIP channels in conjunction with ISDN and/or analogue ports the maximum number of possible subscribers must be taken into account (COMpact 4000/5200/5200R/5500R, COMmander 6000/6000R/6000RX).

- VoIP channels are usable individually external (trunk line) or internal (for subscribers). The available VoIP channels of a system can be divided upon personal demand into these two usage categories. In COMpact 4000/5200/5200R/5500R VoIP channels can be configured for the use with voicemail and fax boxes.

- All systems have a minimum of 1 voicemail box already in the basic setup.